




Asus Transformer Pad Infinity Battery Replacement

This guide will demonstrate how to replace the battery of the device.

Written By: Allison Poh

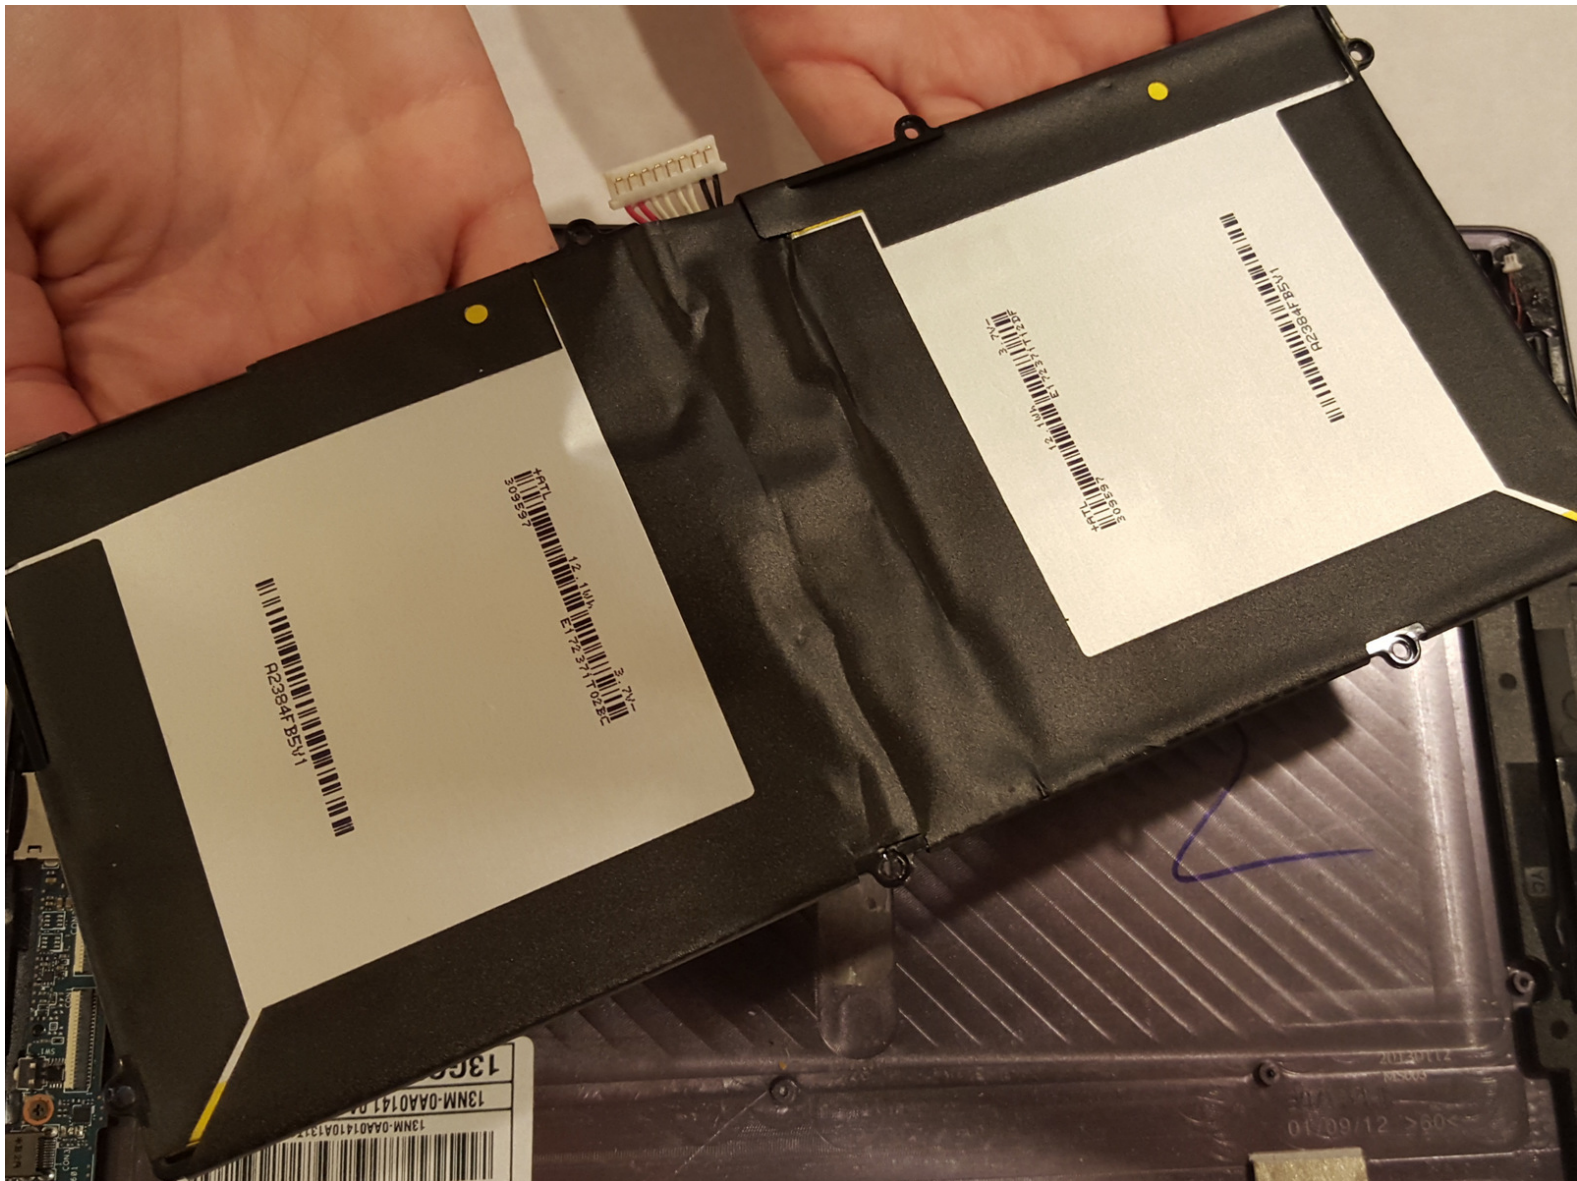

INTRODUCTION

Replacing the battery involves opening up the device. Prerequisites; follow the [Asus Transformer Pad Infinity Teardown](#) link up to step 6 to remove the screen.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
- [Tweezers - Pro/ESD/Angled](#) (1)
- [Spudger Plastic opening tool screwdriver](#) (1)
- [Anti-Static Wrist Strap](#) (1)




optional



PARTS:


- [ASUS Transformer Pad Infinity \(TF700T\) Battery](#) (1)

Step 1 — Battery

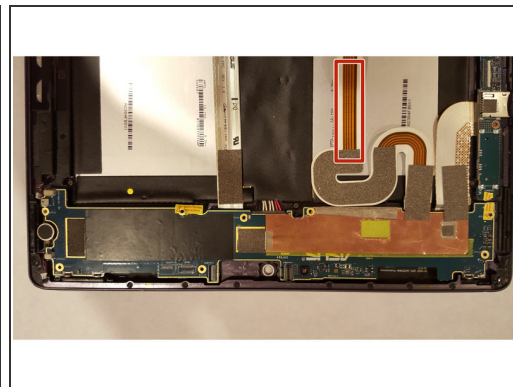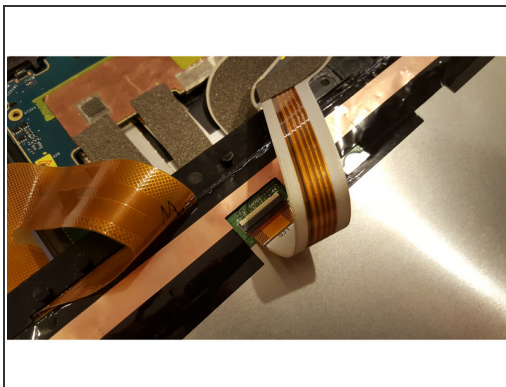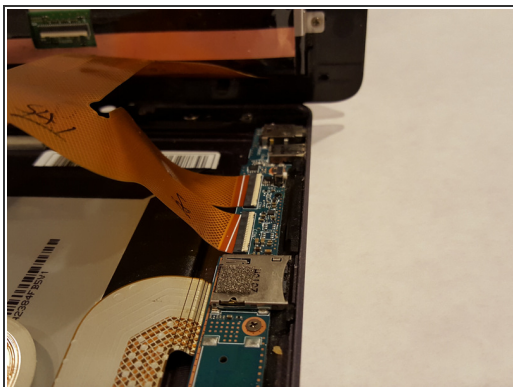


- Disconnect the long silver ribbon connector from the screen.
- Remove the orange ribbon connector with the two connections.

Step 2

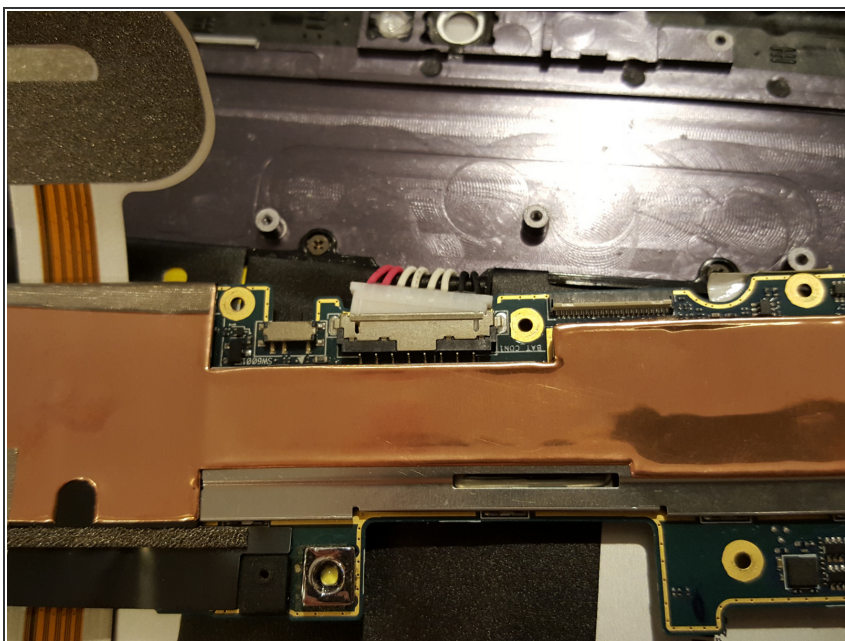


- Disconnect the battery from the big motherboard.

Step 3

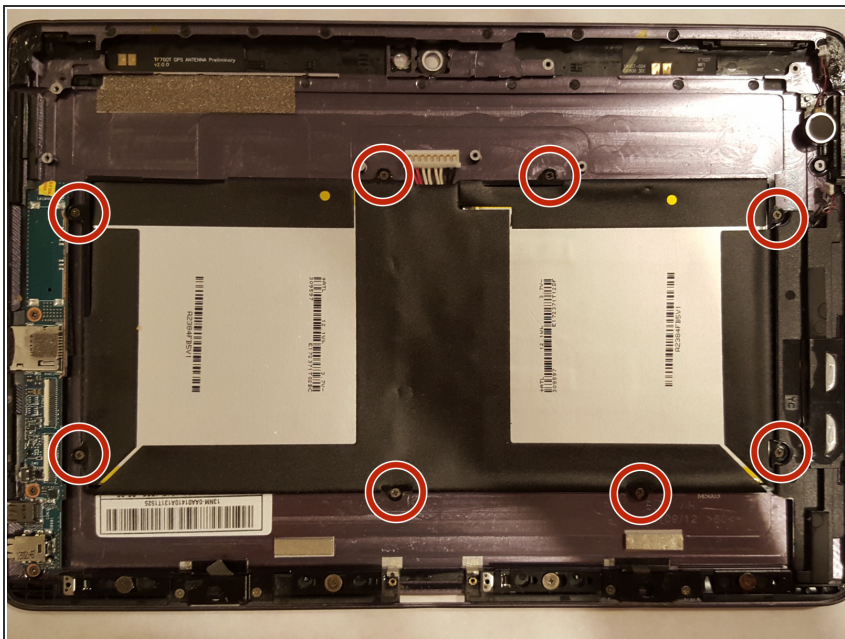

- Unscrew all eight screws connecting the battery to the case.
- Remove the battery.

Step 4

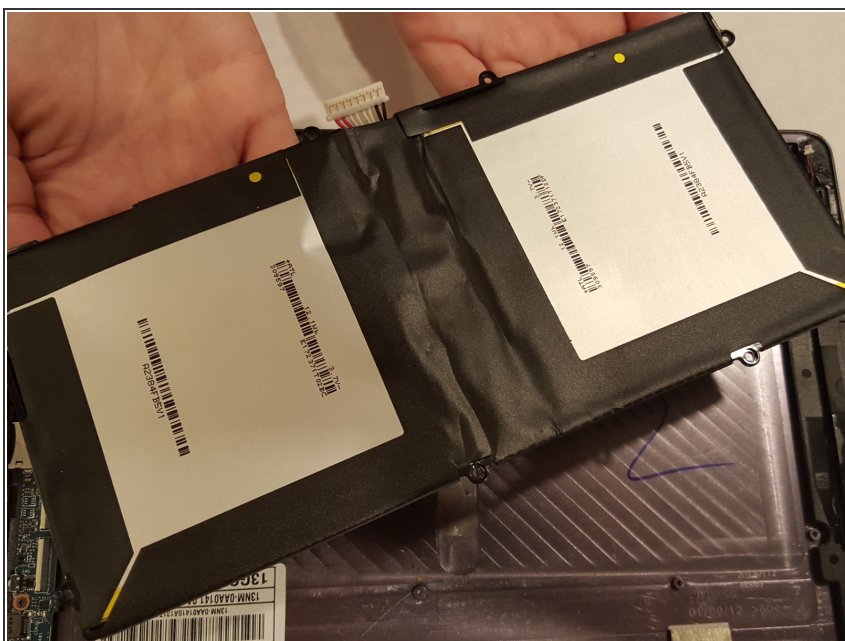

- Place the new battery in the same spot as the old battery.
- Screw the eight screws back in place to connect the new battery to the case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-15 11:33:36 AM.